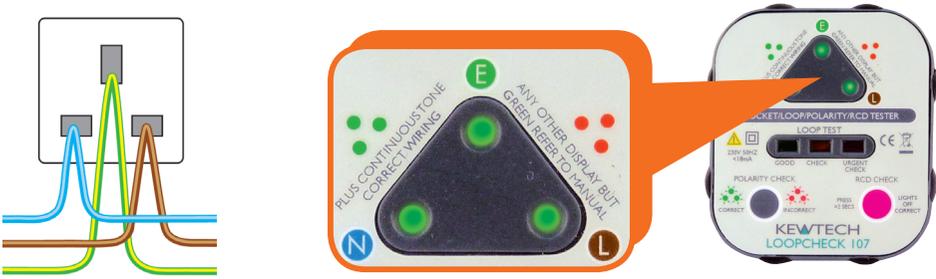
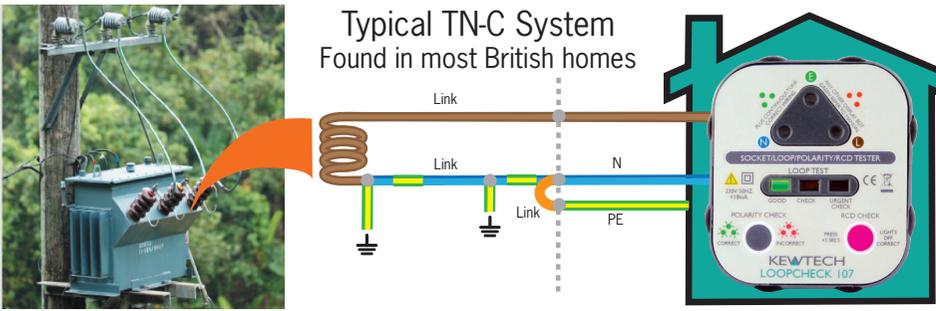
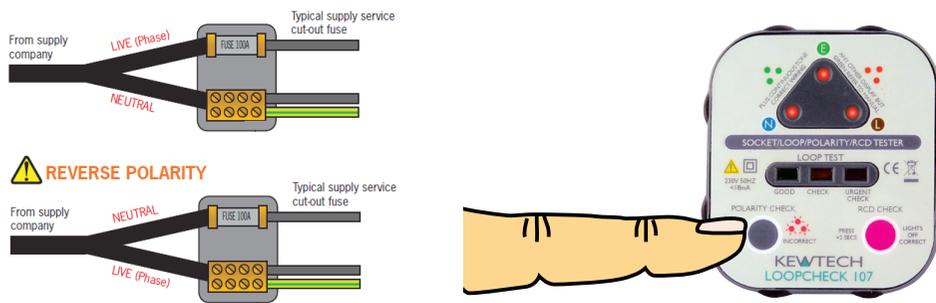


WHY IT HAS TO BE A LOOPCHECK

	Loopcheck 107	Loopcheck 106	Others
	<p>Correct polarity at the socket Are there any wrong or miss connect</p>		
 <p>Typical TN-C System Found in most British homes</p>	<p>Quality of the loop Are all the connections and condition of the earth return path safe?</p>		
	<p>Correct polarity of supply Extremely dangerous if incorrect</p>		